

KH EN

កង្ហាបញ្ជូន MFA-SR14C




សៀវភៅណែនាំ

60
Watt

220-240v
volt

50Hz

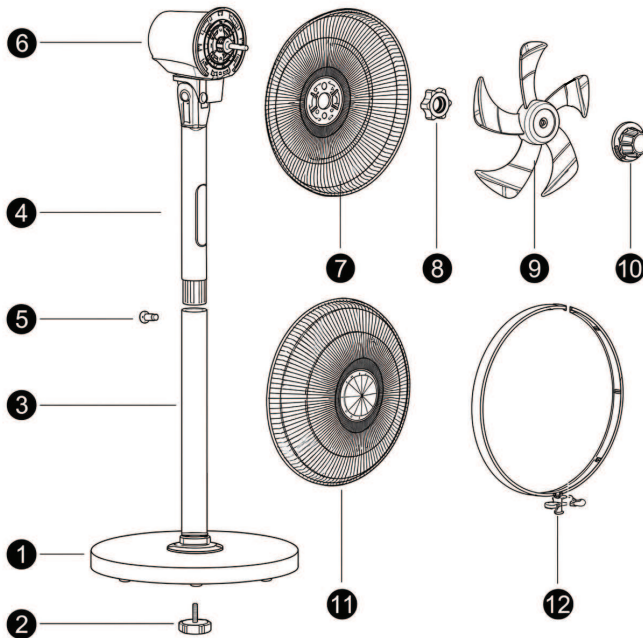

- 1: Base**
- 2: Base screw**
- 3: Stand column 1**
- 4: Stand column 2**
- 5: Stand column screw**
- 6: Motor**
- 7: Back grills**
- 8: Lock net**
- 9: Blade**
- 10: Blade cover**
- 11: Front grills**
- 12: Grills belt**

PLEASE READ THIS INSTRUCTION MANUAL BEFORE USE AND
RETAIN IT FOR FUTURE REFERENCE

IMPORTANT SAFETY INSTRUCTIONS

1. Never insert fingers, pencils, or any other object through the grill when the fan is running.
2. Unplug the appliance before moving it from one place to another.
3. Always unplug the fan before putting on or taking off parts or cleaning.
4. Always use on a level surface.
5. To avoid shock hazard, never allow the fan to come into contact with water.
6. If the power cord is damaged, it must be repaired or replaced by the manufacturer, maintenance department or professional staff from the similar department to avoid risk.
7. This appliance is not intended for use by children under the age of 8. Persons with reduced physical, sensory or mental capabilities including children above the age of 8, or lack of experience and knowledge may use the appliance on condition that they have been given supervision or instruction concerning use of the appliance by a person responsible to their safety. Children should not play with the appliance. The appliance should not be cleaned nor maintained by children under the age of 8 or children that do not remain under supervision.

HOW TO USE

1. Speed control: set the desired speed by moving the switch into one of the four positions: 0, 1, 2, 3 or 4, which represent: power OFF, slow, moderate and fast, respectively.
2. To adjust the airflow upward or downward, push the tilt lock and tilt the fan head to the desired angle.
3. Do not touch the blades with your hands or with any hard object when the fan blade is in motion.
4. Mount on the wall using strong and durable tools. Make sure the fan is properly and firmly fixed.

CLEANING/MAINTENANCE


1. Disconnect the power cord from the electricity supply.
2. Carefully remove the front grill and blade. Do not drop the blade.
3. Use a soft cloth/sponge and mild soap solution to clean off oil stains. Wipe dry with a dry cloth. Never use polisher or any corrosive liquids that may damage the paint, metal or plastic.
4. Mount the blade and front grill and secure with the nut.

TECHNICAL SPECIFICATIONS

Voltage: **220~240V**

Frequency: **50Hz**

Power: **60W**

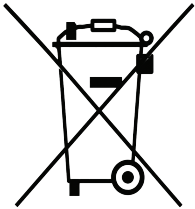

In accordance with the provisions of the Act of 29 July 2005 on waste electrical and electronic equipment, it is forbidden to disposal wasted equipment marked with crossed out wheelie bin symbol.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

In order to obtain information on where and how environmentally safe recycling of this product, household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take this item for environmentally safe recycling.



Make Life Better

ក្រុមហ៊ុន មេគង្គ ជេនឺវ៉ល អេឡិចត្រូនិក ស៊ីបផ្លាយ ខូ អិលធីឌី

 <https://www.mge.asia>

 info@mge.asia

 +855 963 113 777



Scan to get support